
NMG0714-M2 Reset Hinge Adjustment

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

RESET INSTALLATION INSTRUCTIONS NMG0714*					
STARTER MFR.	**SIZE**	**HINGE POSITION**	**SLOT POSITION**	**RESET EXTENSION ASSEMBLY**	**X DIM.**
A-B	0-1	H4	S2	B	13/16
C-H	0-1	H2	S2	D	2
G. E.	0-1	H3	S2	C	1 5/8
SQ. D	0-1	H2	S2	B	1 1/16
WEST.	0-1	H1	S2	C	13/16

***With T, J, PB, or RR suffixes**

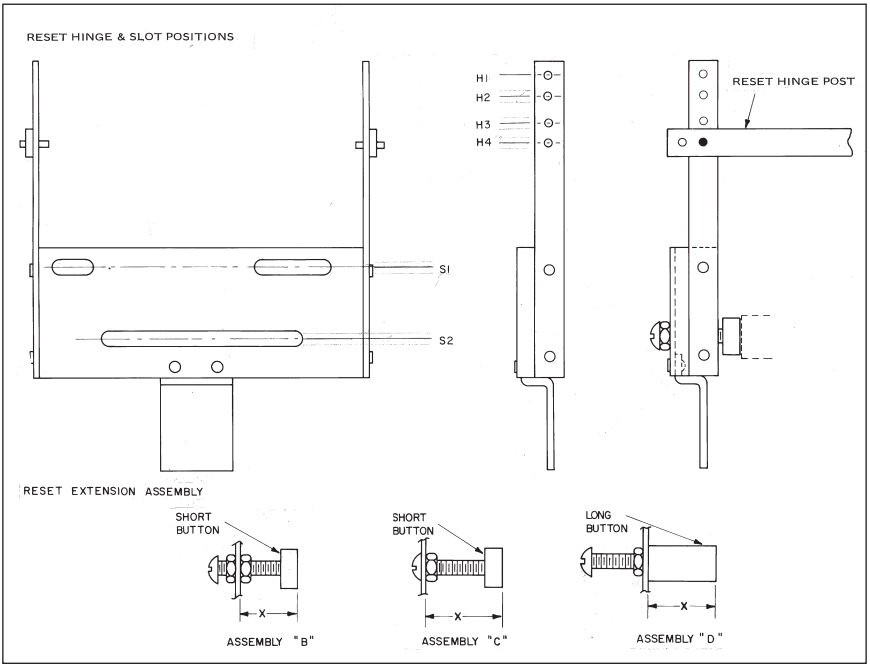

All statements, technical information and recommendations contained herein are based on information and tests we believe to be reliable. The accuracy or completeness thereof are not guaranteed. In accordance with Crouse-Hinds "Terms and Conditions of Sale", and since conditions of use are outside our control, the purchaser should determine the suitability of the product for his intended use and assumes all risk and liability whatsoever in connection therewith.