CAUTION – RISK OF SHOCK –
Disconnect Power at the main circuit breaker panel or main fusebox before starting and during the installation.


WARNING:
This fixture is intended for installation in accordance with the National Electrical Code (NEC) and all local code specifications. If you are not familiar with code requirements, installation by a certified electrician is recommended.


DIMMING:
This LED fixture is compatible with standard incandescent dimmers, LED dimmers, and electronic low voltage dimmers. For optimal performance, an electronic low voltage dimmer should be used.

CLEANING:
Always be certain that electric current is turned off before cleaning. Only a damp cloth should be used. Harsh cleaning products may damage the finish.

FCC INFORMATION:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Instructions
1) Pass the colored wires from the pendant assembly **[1]** through desired amount of stems**[2]** and screw stems together using supplied short threaded tubes**[3]**.
   NOTE: Thread locking compound must be applied to all stem threads as noted with arrow symbol to prevent accidental rotation of fixture during cleaning, relamping, etc.
2) Pass fixture wire through end of swivel**[4]** without threaded pipe.Thread that end of swivel onto end of last stem.
   NOTE: Direction of swivel in accordance with ceiling.
3) Pass fixture wire through hole in canopy**[5]**. Pass threaded pipe on end of swivel up through hole in canopy.
4) Pass fixture wire through lockwasher**[6]** and hexnut**[7]**. Thread lockwasher and hexnut onto end of threaded pipe protruding from inside canopy.
5) Cut the 4 wires approximately 6" from where they pass through the lockwasher and hexnut. Strip the insulation from the last ½" of all four wires.
6) Connect the yellow, gray, purple and blue wires from the pendant assembly **[1]** to the matching colored wires from the LED driver **[8]** together with the smaller wire nuts (provided).
7) Find the appropriate threaded holes on mounting strap**[9]**. Assemble mounting screws**[10]** into threaded holes.
8) Attach mounting strap to outlet box. Mounting strap can be adjusted to suit position of fixture.
9) Grounding instructions: (See Illus. A or B).
   A) On fixtures where mounting strap is provided with a hole and two raised dimples. Wrap ground wire from outlet box around green ground screw, and thread into hole.
   B) On fixtures where a cupped washer is provided. Attach ground wire from outlet box under cupped washer and green ground screw, and thread into mounting strap.
   If fixture is provided with ground wire. Connect fixture ground wire to outlet box ground wire with wire connector. (Not provided.) After following the above steps. Never connect ground wire to black or white power supply wires.

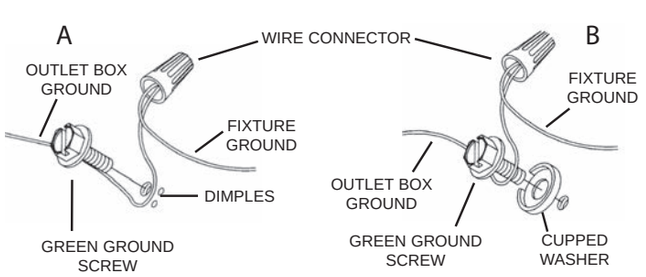


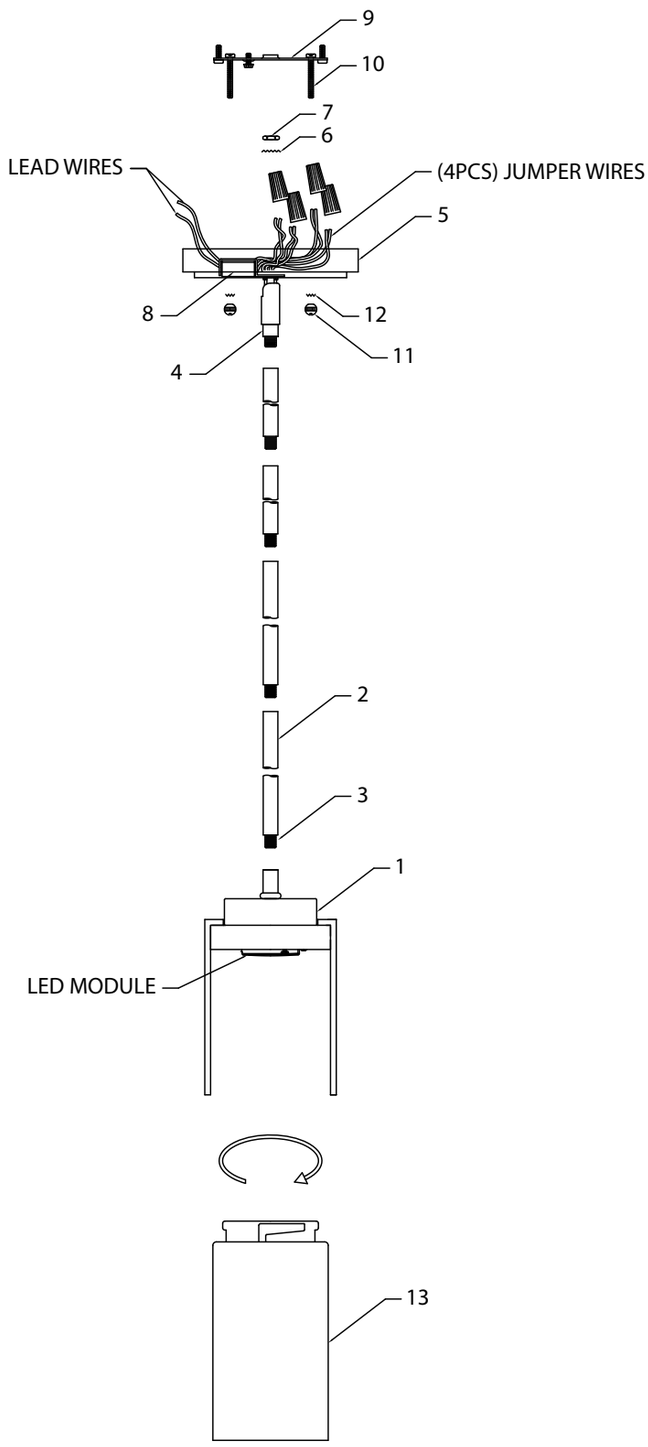

10) Make wire connections from the driver to the electrical box wires. Reference chart below for correct connections and wire accordingly.

Connect Black or Red Supply Wire to:	Connect White Supply Wire to:
Black	White
*Parallel cord (round & smooth)	*Parallel cord (square & ridged)
Clear, Brown, Gold or Black without tracer	Clear, Brown, Gold or Black with tracer
Insulated wire (other than green) with copper conductor	Insulated wire (other than green) with silver conductor

*Note: When parallel wires (SPT I & SPT II) are used. The neutral wire is square shaped or ridged and the other wire will be round in shape or smooth (see illus.)

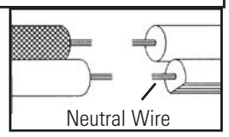

11) Push fixture to ceiling, carefully passing mounting screws through holes in canopy. NOTE: Be certain wires do not get pinched between canopy and ceiling.
12) Use knobs**[11]** and lockwashers**[12]** to secure canopy. Tighten to secure.
13) Screw Glass**[13]** into the pendant assembly.

KICHLER

INSTRUCTIONS
For Assembling and Installing Fixtures in Canada
Pour L'assemblage et L'installation Au Canada

Nous sommes là pour vous aider 866-558-5706
Heures : du lundi au vendredi, de 9h à 17h (heure de l'Est)

ATTENTION – RISQUE DE DÉCHARGES ÉLECTRIQUES - Couper le courant au niveau du panneau du disjoncteur du circuit principal ou de la boîte à fusibles principale avant de procéder à l'installation.

WARNING:
Ce luminaire doit être installé conformément aux codes d'électricité nationaux (NEC) et satisfaire toutes les spécifications des codes locaux. Si vous ne connaissez pas les exigences de ces codes, il est recommandé de confier l'installation à un électricien certifié.

GRADATION:
Ce luminaire LED est compatible avec les gradateurs standard à incandescence, gradateurs LED, et gradateurs électroniques a basse tension. Pour une performance optimale, utiliser un gradateur électronique à basse tension.

NETTOYAGE:
Toujours veiller à ce que le courant électrique soit coupé avant de nettoyer. Utiliser uniquement un chiffon doux humidifié. Les produits de nettoyage trop puissants peuvent endommager la finition.

FCC INFORMATION:
Cet appareil est conforme à la section 15 de la réglementation de la FCC. L'exploitation est soumise aux deux conditions suivantes :

(1) Cet équipement ne doit pas causer d'interférences nuisibles, et
(2) cet équipement doit accepter toute interférence reçue, y compris les interférences risquant d'engendrer un fonctionnement indésirable.

Remarque: Des tests ont confirmé que ce matériel respecte les limites d'un dispositif numérique de catégorie B, en vertu de la section 15 de la réglementation de la FCC. Ces limites ont été conçues pour fournir une protection raisonnable contre le brouillage nuisible d'une installation résidentielle. Cet équipement génère, utilise et peut rayonner de l'énergie radiofréquence et, s'il n'est pas installé et utilisé selon les instructions, peut causer de l'interférence nuisible aux communications de radio. Cependant, il est néanmoins possible qu'il y ait de l'interférence dans une installation en particulier. Si cet équipement cause du brouillage nuisible à la réception du signal de radio ou de télévision, ce qui peut être déterminé en éteignant puis en rallumant l'appareil, l'usager peut essayer de corriger l'interférence en appliquant une des mesures suivantes :


- Réorienter l'antenne de réception ou changer son emplacement.
- Augmenter la distance séparant l'équipement et le récepteur.
- Brancher le matériel dans la prise de courant d'un circuit différent de celui auquel le récepteur est branché.
- Consulter le revendeur ou un technicien radio/télé d'expérience.


INSTRUCTIONS:

1) Pass the colored wires from the pendant assembly**[1]** through desired amount of stems**[2]** and screw stems together using supplied short threaded tubes**[3]**.
   REMARQUE: le composé de verrouillage de filetage doit être appliqué à tous les fils de la tige comme indiqué avec un symbole fléché pour empêcher la rotation accidentelle du luminaire pendant le nettoyage, la relamping, etc.
2) Passer le fil de fixation à travers l'extrémité de pivotement sans tuyau fileté**[4]**. Enfilez l'extrémité de pivotement sur l'extrémité de la dernière tige.
   REMARQUE: pivotante en conformité avec le plafond.
3) Faire passer le fil de fixation à travers le trou dans la canopée**[5]**. Passez tuyau fileté sur l'extrémité de pivot dans le trou de la canopée.
4) Passer le fil de fixation à travers le trou dans la rondelle**[6]** et hexnut**[7]**. Enfiler la rondelle d'arrêt et hexnut sur l'extrémité du tuyau fileté faisant saillie à l'intérieur de la canopée.
5) Couper les 4 fils à environ 6 "d'où ils traversent le lave-vaisselle et l'écrou hexagonal. Retirez l'isolation du dernier ½ "des quatre fils.
6) Raccorder les fils jaune, gris, violet et bleu de l'ensemble pendentif **[1]** aux fils colorés correspondants du pilote LED **[8]** avec les petits écrous métalliques (fournis)
7) Trouvez les trous taraudés appropriés sur sangle de fixation**[9]**. Monter les vis de montage dans les trous filetés**[10]**.
8) Attachez la sangle de fixation à la boîte de sortie**[9]**. (Vis non fournies). sangle de fixation peut être ajustée en fonction de la position de montage.
9) Effectuez des connexions filaires du conducteur aux fils électriques de la boîte. Se porter au tableau ci-dessous pour faire les connexions.

Connecter le fil noir ou rouge de la boite	Connecter le fil blanc de la boîte
A Noir	A Blanc
*Au cordon parallèle (rond et lisse)	*Au cordon parallele (à angles droits el strié)
Au bransparent, doré, marron, ou noir sans fil distinctif	Au transparent, doré, marron, ou noir avec un til distinctif
Fil isolé (sauf fil vert) avec conducteur en cuivre	Fil isolé (sauf fil vert) avec conducteur en argent

*Remarque: Avec emploi d'un fil paralléle (SPT I et SPT II). Le fil neutre est á angles droits ou strié et l'autre fil doit étre rond ou lisse (Voir le schéma).

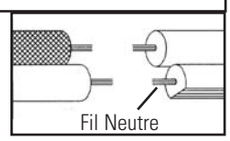

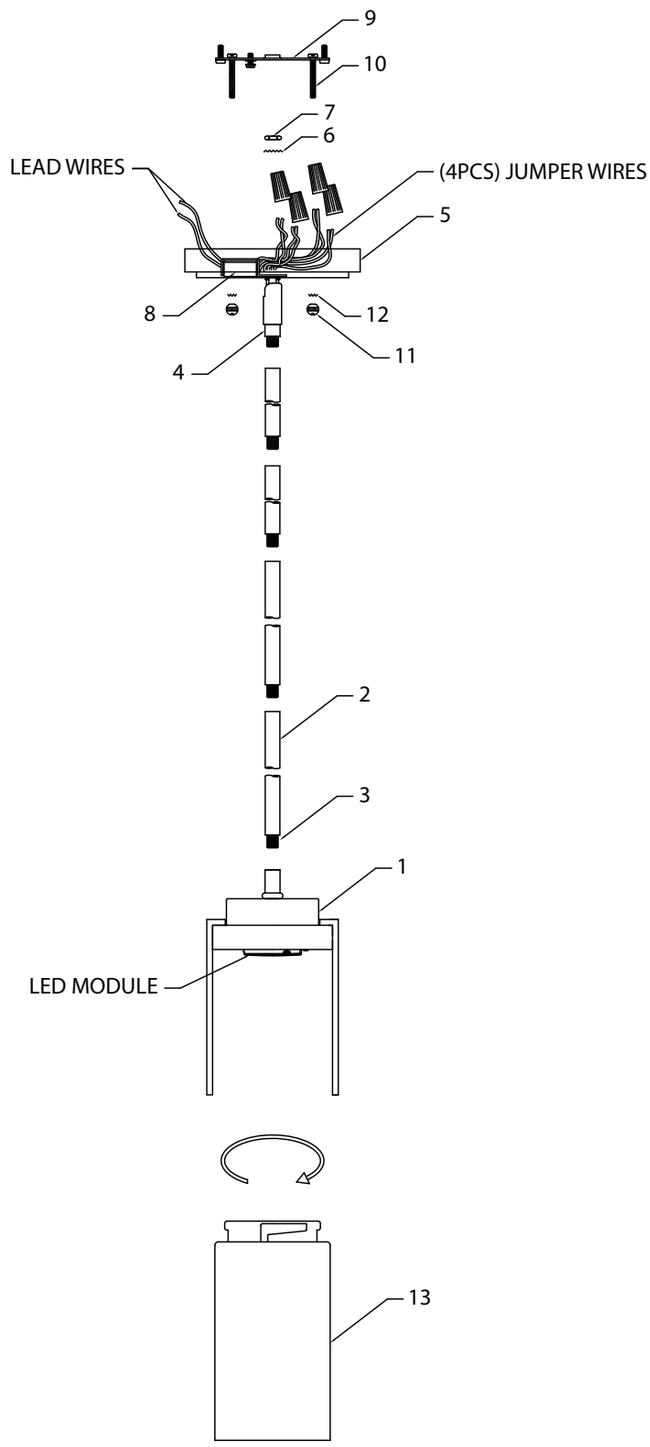

10) Poussez fixation au plafond, en passant soigneusement les vis de montage à travers des trous dans la canopée.
11) Utilisez les boutons**[11]** et les rondelles de blocage**[12]** pour sécuriser l'arche. Serrez pour sécuriser.
12) Vissez le verre **[13]** dans l'ensemble pendentif.